

SHAD


PULSAR NS 200 '14
PONS24iF

3P
SYSTEM

DESIGNED IN
BARCELONA



1 261749 x1 →
261750 x1 ←

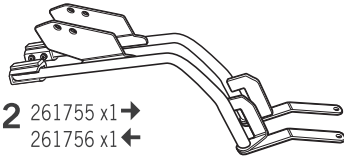

2 261755 x1 →
261756 x1 ←



3 303020 x16
Ø8



4 304272 x4
M8 x 35 Din 7380



5 260731 x4
Ø16 Ø11 x 10



6 304081 x4
M8 x 20 DIN 7380



7 302024 x6
M8



8 304170 x2
M8 x 60 Din 7380



WARNING!

(GB)

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

(E)

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

(D)

Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

(I)

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

(F)

Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

