


SHAD

HONDA CBF 190 R '16-'17

KIT TOP H0CB16ST

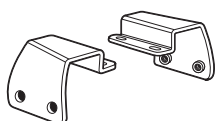


1 262085 x1 →
262086 x1 ←



2 303020 x4
Ø8



3 304028 x8
M8 x 25 DIN 7380

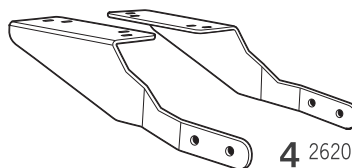

4 262087 x1 →
262088 x1 ←



5 303045 x4
Ø8

! WARNING!

GB Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

E No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

D Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

I Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

F Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

ATTENTION: For a full equip assembly, mount the 3p system later the Top master.

