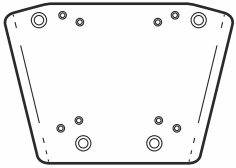


SHAD

HONDA FORZA 750 '21 / X - ADV 750 '21

TOP MASTER H0XV71ST

BCN**1** 262983 x1**2** 304088 x4
M8 x 35
Din 7991**3** 260213 x4
Ø16 Ø9 x 12**4** 303025 x4
Ø10**5** 303020 x4
Ø8**6** 302024 x4
M8

WARNING!

GB Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

E No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

D Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

I Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

F Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté.

