



DIFFICULTY LEVEL


SHAD

VOGE DS 800 RALLY '25

4P
SYSTEM

BCN

V0DS854P

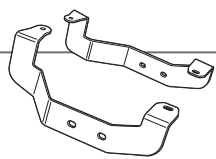

1 263660 x1 →
263661 x1 ←




2 303045 x12
Ø8



3 303027 x6
Ø8



4 304028 x6
M8x25 DIN 7380

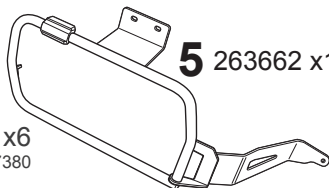


5 263662 x1




6 302024 x4
M8




7 260596 x2
Ø16 Ø9 x 20



8 304169 x2
M8x50 DIN 7380

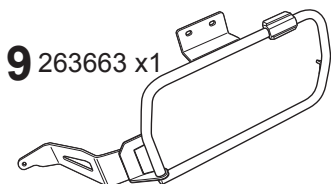

9 263663 x1



10 263664 x1



11 304052 x2
M6x20 DIN 7380



12 303017 x4
Ø6



13 302021 x2
M6

WARNING!


(GB) Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned. Check tightness every 4 months.

(E) No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado. Repasar apriete cada 4 meses.

(D) Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist. Alle 4 Monate Drehmoment überprüfen.

(I) Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato. Controllare il serraggio delle viti ogni 4 mesi.

(F) Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté. Vérifier le serrage des vis tous les 4 mois.

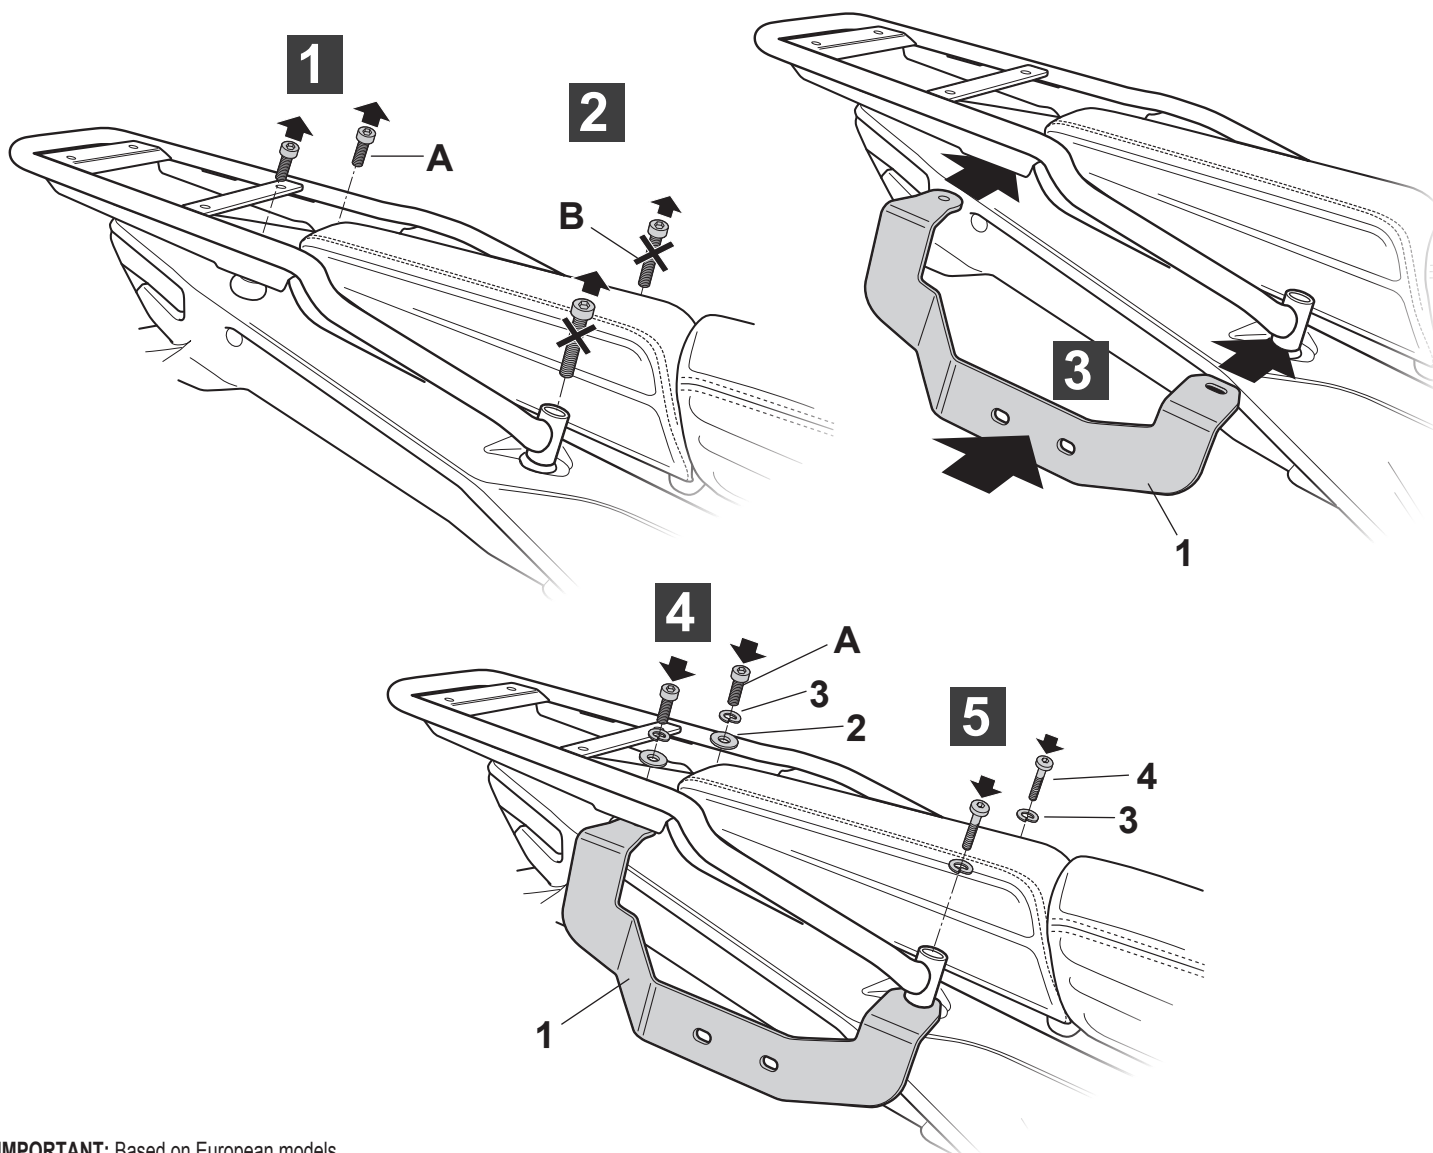

IMPORTANT: Based on European models.

For compatibility with models in other continents, check www.shad.es

